



Electrical System

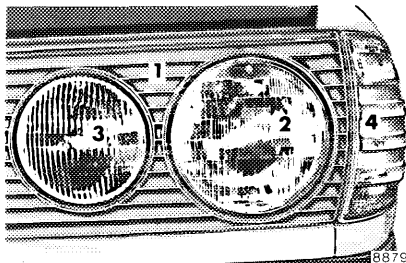

Headlamp Adjustment

Correct headlamp adjustment is extremely important. Check and readjust headlamps at regular intervals and when a lamp has been replaced.

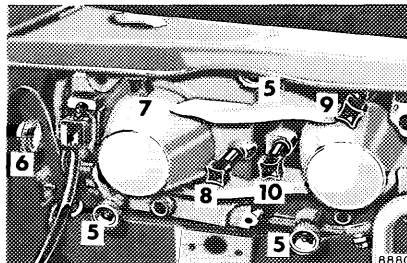

Replacing Bulbs


To remove, push the bulb in and turn to the left, then lift the bulb out.

To install, grip the bulb with a paper tissue or similar cloth, align the pins on the base of the bulb with the grooves in the bulb socket, push in lightly and turn to the right until the stop is felt.


Install only 12 volt bulbs with the specified watt rating.

Front Lamps

- 1 Cover. Remove cover (1) after backing out knurled plastic nuts located behind headlamps.

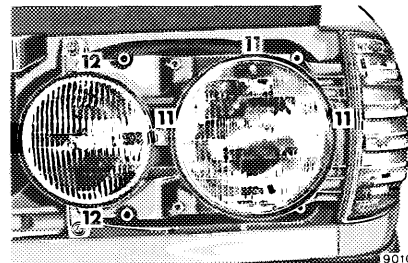


- 2 Sealed-beam unit for high and low beam (Sealed-beam/Halogen)
- 3 Fog lamp (H 3)
- 4 Turn signal, parking, side marker and standing lamp (21/5 W/ 32/3 cp)
- 5 Securing nuts for cover
- 6 Securing nuts for turn signal, parking, side marker and standing lamp
- 7 Vertical adjusting screw, sealed-beam unit
- 8 Horizontal adjusting screw, sealed-beam unit
- 9 Vertical adjusting screw, fog lamp
- 10 Horizontal adjusting screw, fog lamp

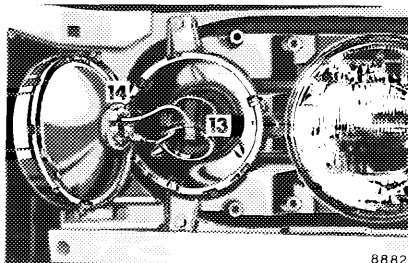


8882

- 11 Securing screws for sealed-beam unit retaining ring. Loosen securing screws, remove retaining ring and unit. Pull off connector.
- 12 Securing screws for fog lamp retaining ring. Loosen securing screws and take out lamp body. Pull off plug (13). Disengage retaining spring and remove bulb (14).

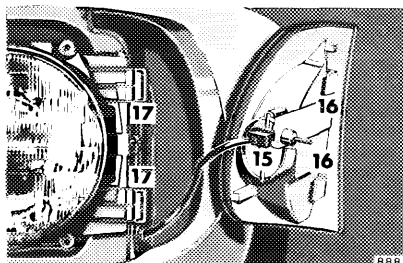


8883

- 15 Bulb for turn signal, parking, side marker and standing lamp. Loosen fastener (6). Push lamp body forward and detach. Hold lamp holder by the wide lug and pull out. Depress bulb, turn to the left and take out. When installing the bulb holder, the lugs must engage the lamp body recesses. When installing the lamp body, never fail to engage the locating webs (16) between the retaining springs (17).

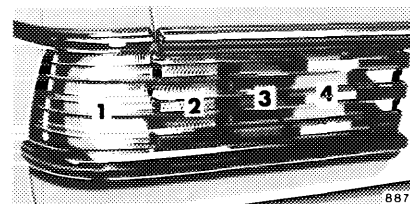

8871

 


8870

Tail Lamp Assembly

Remove both knurled nuts in the trunk and pull off lens assembly. To replace the bulbs, depress, turn left and pull out.


- 1 Turn signal lamp (21 W/32 cp) side marker lamp (4 W/2 cp)
- 2 Tail, parking and standing lamp (10 W/6 cp)
- 3 Stop lamp (21 W/32 cp)
- 4 Backup lamp (21 W/32 cp)

Electrical System

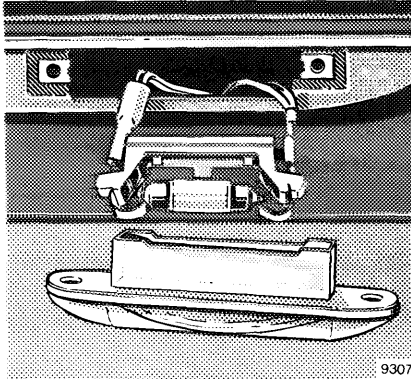

License Plate Lamps (5 W festoon lamp)


Open trunk lid, loosen both securing screws of the lamp and remove lamp. Pull out lamp holder.

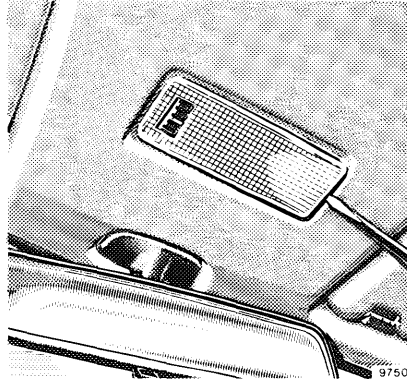

Interior Lamps (10 W festoon lamp)


To replace the bulb, lift off front lamp at RH side, pull it out and open reflector.

The same applies to the removal of the rear lamp.

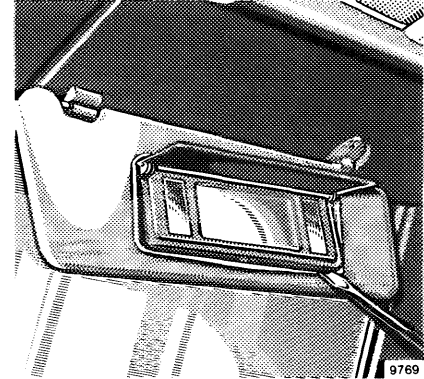


Sun Visor Lamp (5 W festoon lamp)

To replace a bulb, pry off the cover by inserting a screwdriver in the left and right slots located on the lower edge.

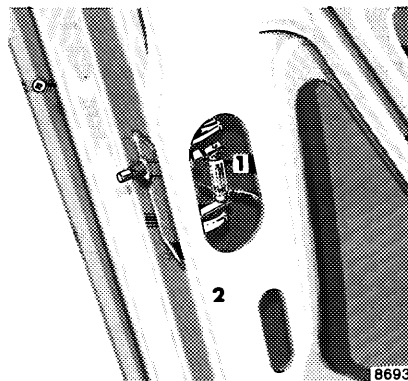

Trunk Lamp (10 W festoon lamp)

The bulb (1) is easily accessible when the trunk lid (2) is opened.

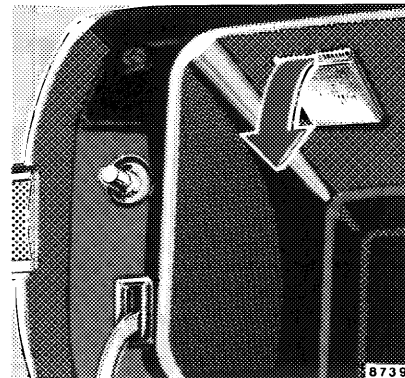

Glove Compartment Lamp (5 W festoon lamp)

To replace the bulb, pull out lamp.